# **Nautilus**

STAINLESS STEEL DISTILLERS LONG REACH FAUCET INSTALLATION

**BEFORE YOU BEGIN** 

## Read These Instructions Completely and Carefully

• Proper installation is the responsibility of installer.

#### **Tools Needed**

- Adjustable sench.
- Drill with 1/2" high speed bit (if drilling a new hole) suitable for formica top or stainless steel sink. Relton cutter is required for porcelain clad iron sinks.

### **Prepare for Installation**

Select one of the following places to install faucet:

- IN an existing sink spray attachment or soap dispenser hole.
- IN a hole to be drilled in sink top.
- IN a hole to be drilled in countertop, next to sink.

Be sure there is room underneath sink/countertop to make the needed connections.

#### **FAUCET INSTALLATION**

- Remove fitting, nut, lock washer and plastic disc from threaded portion of faucet.
- Place threaded end of faucet through hole in sink/countertop positioning it for desired delivery flow location. Make sure large black washer, chrome top washer and small black washer seat flush against sink/countertop.
- From below sink/countertop, secure faucet with plastic disc, lock washer and nut. You may use a wrench on the "flats" of the faucet to hold it in position. Place a cloth between wrench and "flats" to prevent damage to faucet finish.
- Tighten fitting onto threaded portion of faucet.
- Cut 3/8" tubing squarely. Push tubing into fitting as far as it will go (approx. 3/4"). Pull gently on tubing to make sure it is secured. Connect tubing to outlet port of remote faucet pump by fully seating tubing into outlet port fitting (approx. 3/4").
- To dispense water at sink, simply press handle on long reach faucet for instant flow or lift handle for continuous flow. Allow approximately 1 gallon of water to flow through faucet to clear pump system on initial use.
- Turn faucet off and check system for leaks. If any leaks occur turn all switches OFF, unplug the pump box and correct.

